

SPRCHOVÉ VANIČKY Z LITÉHO MRAMORU

MONTÁŽNÍ NÁVOD | MONTAŽNY NÁVOD | INSTALLATION
INSTRUCTIONS | MONTAGEANLEITUNG | INSTRUCTIONS DE MONTAGE

- I. 80x80x3 R55 , 90x90x3 R55 , 100x100x3 R55
- II. 80x80x3 R55 | 90x90x3 R55 | 100x100x3 R55
- III. 100x80x3 | 100x90x3 | 120x80x3 | 120x90x3





I.




II.




III.

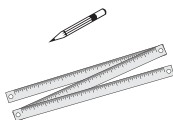


1.

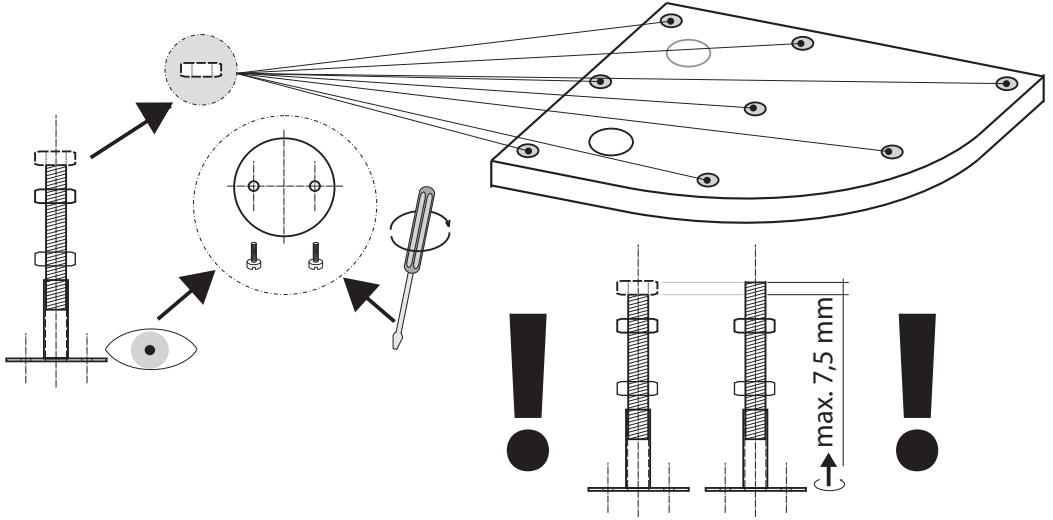


A

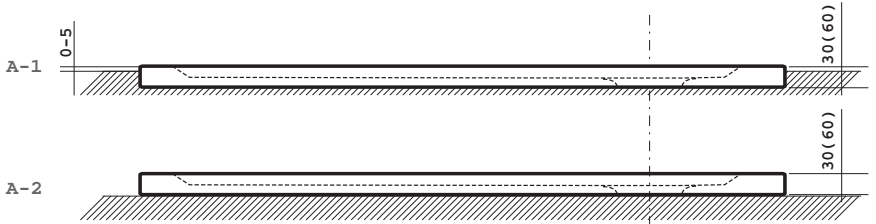


B

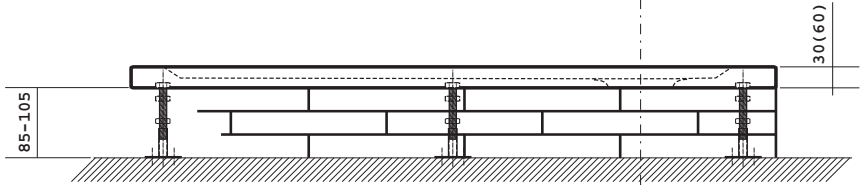


C

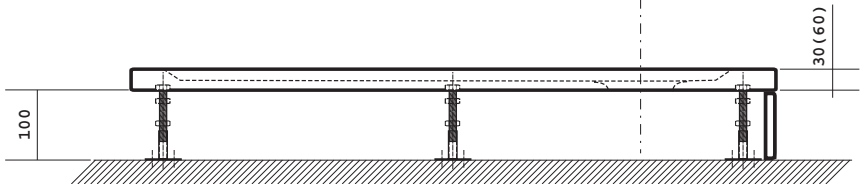


2.

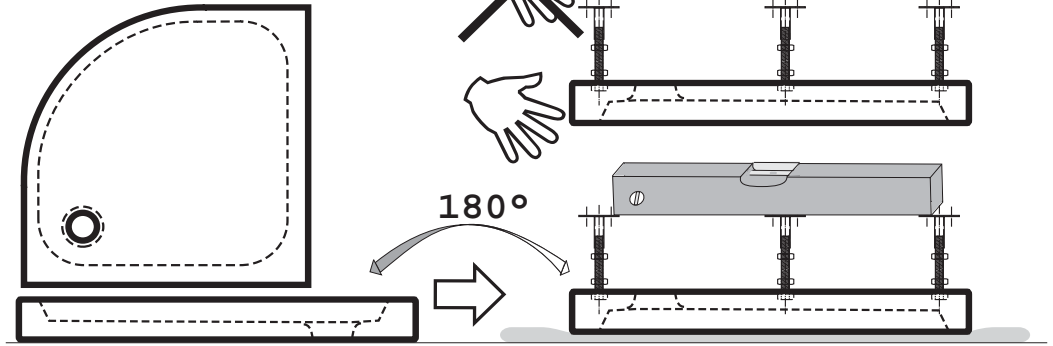


3.

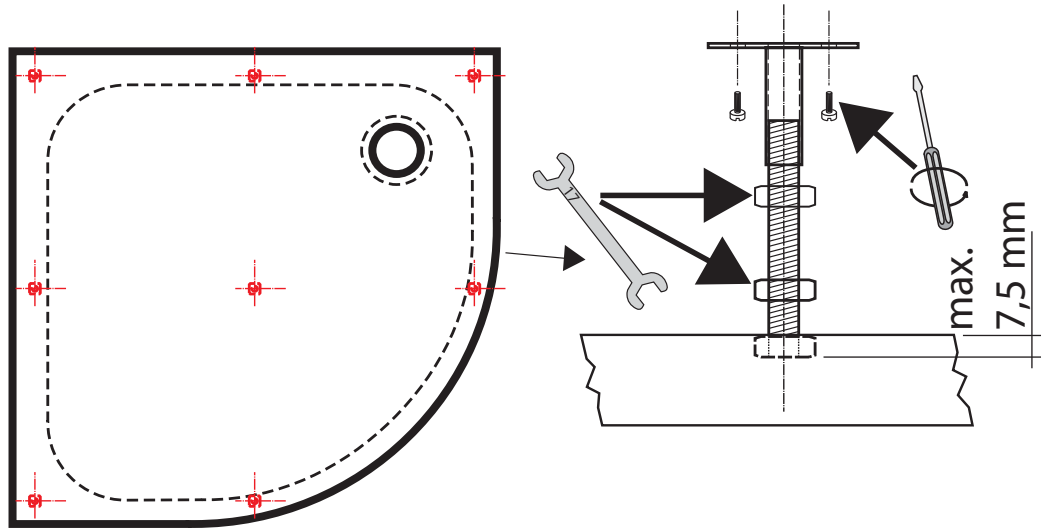

4.

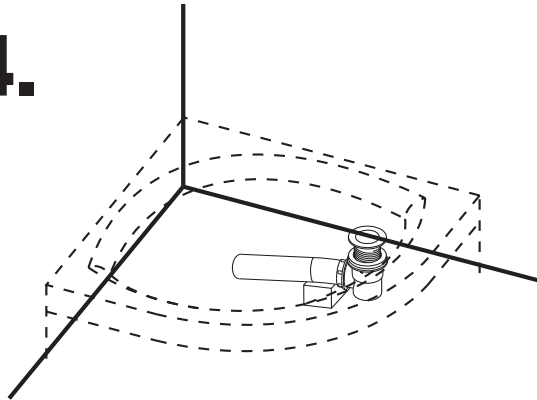


5.



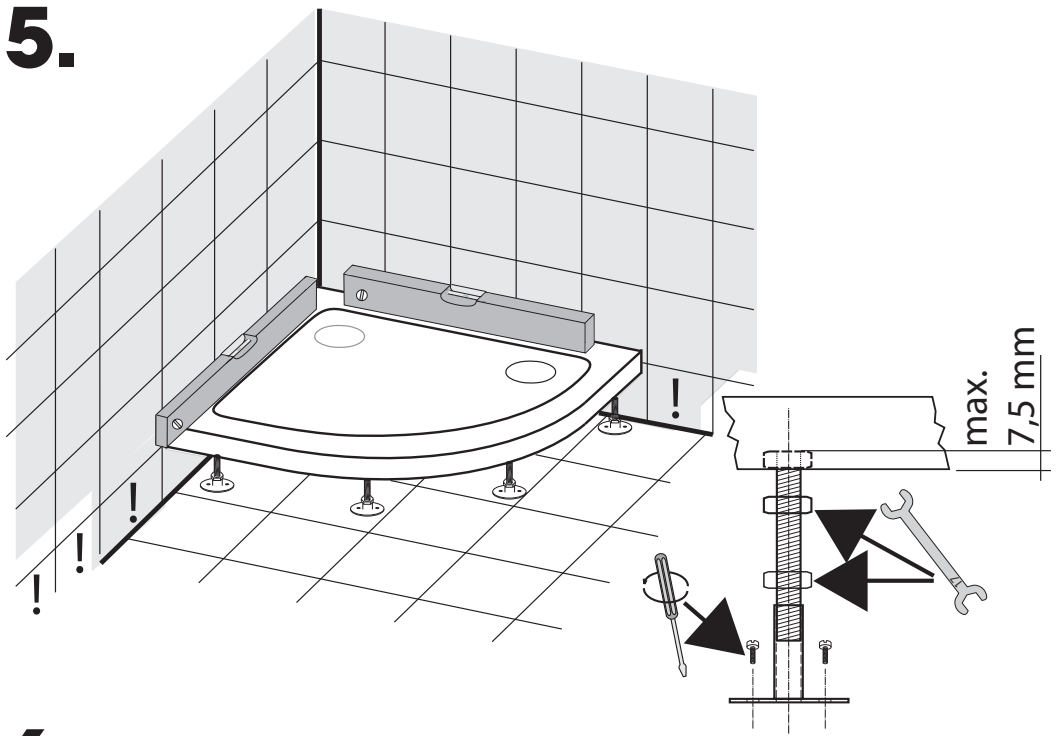


6.



A-2

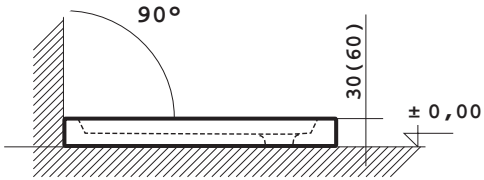



A-1

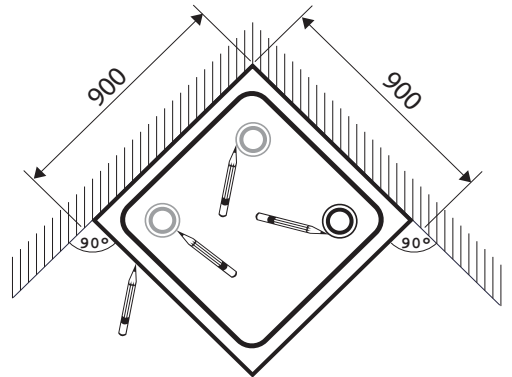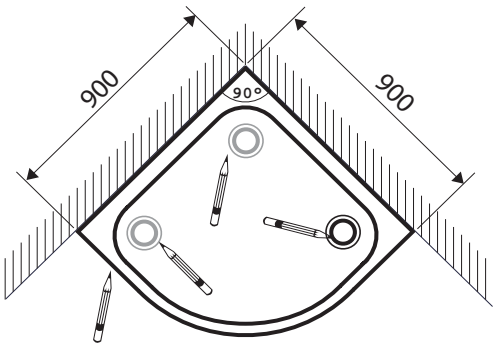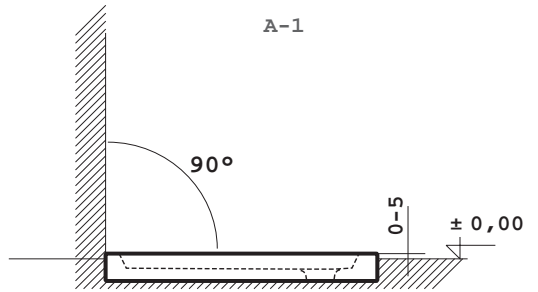


7.

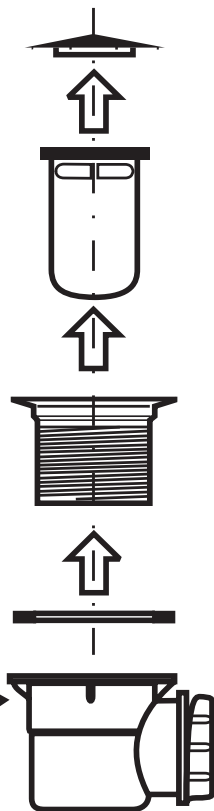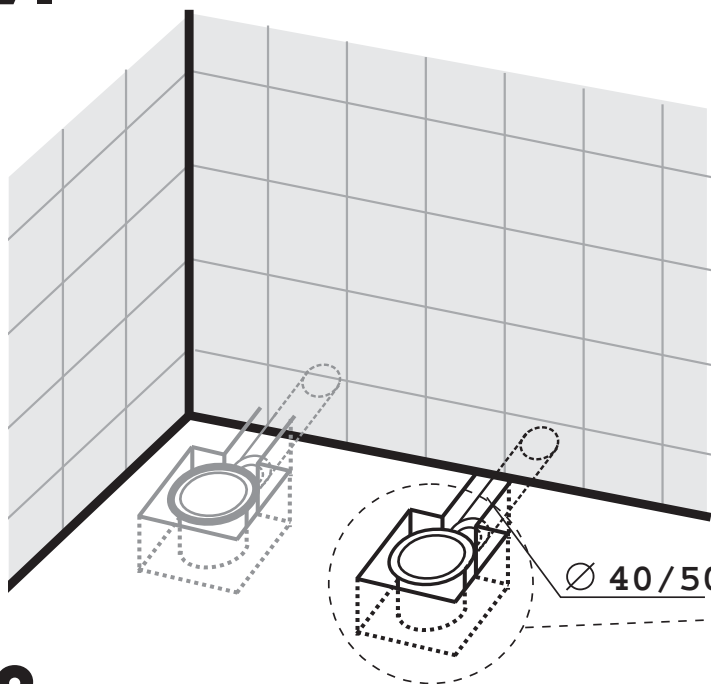


8.

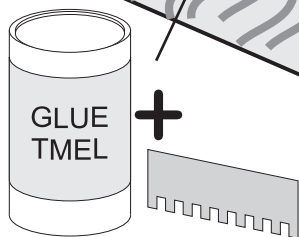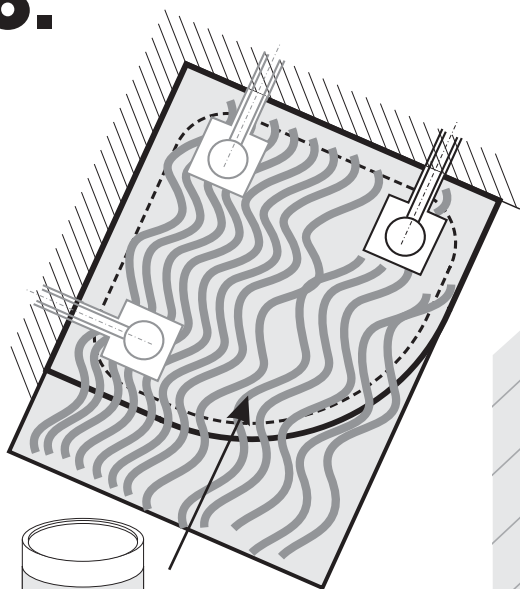


9.

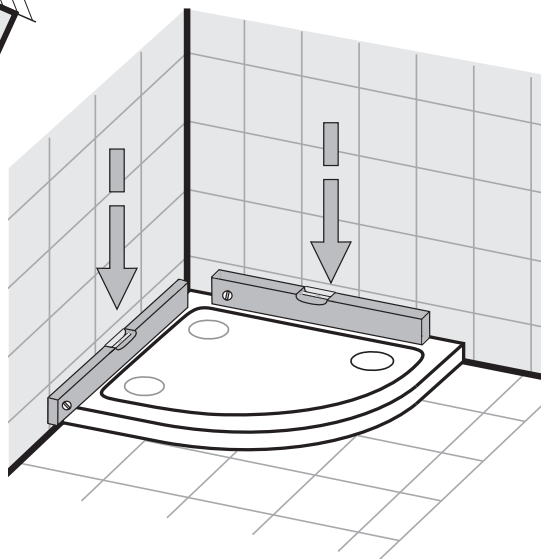


10.

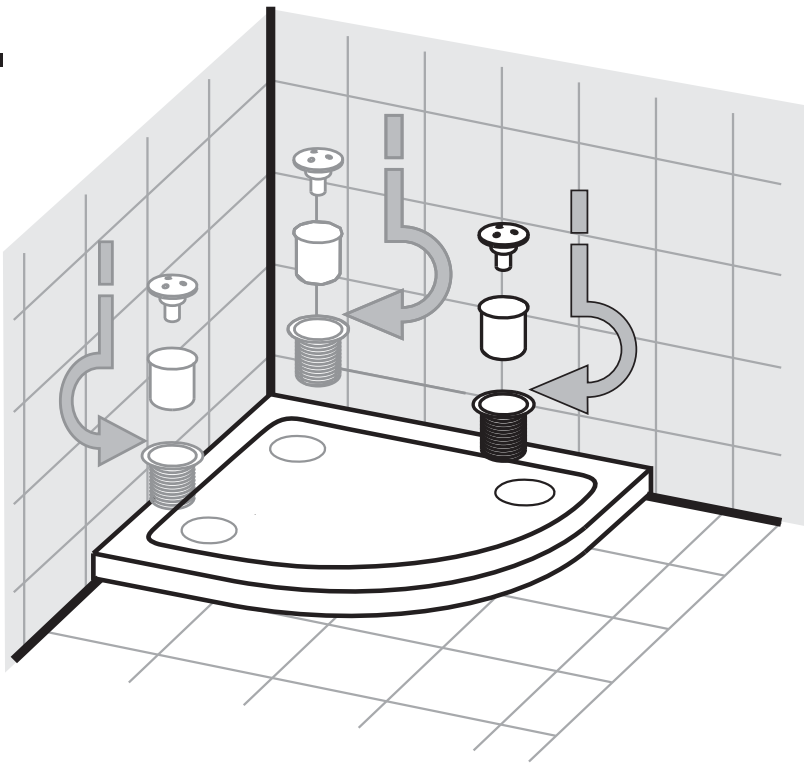


11.

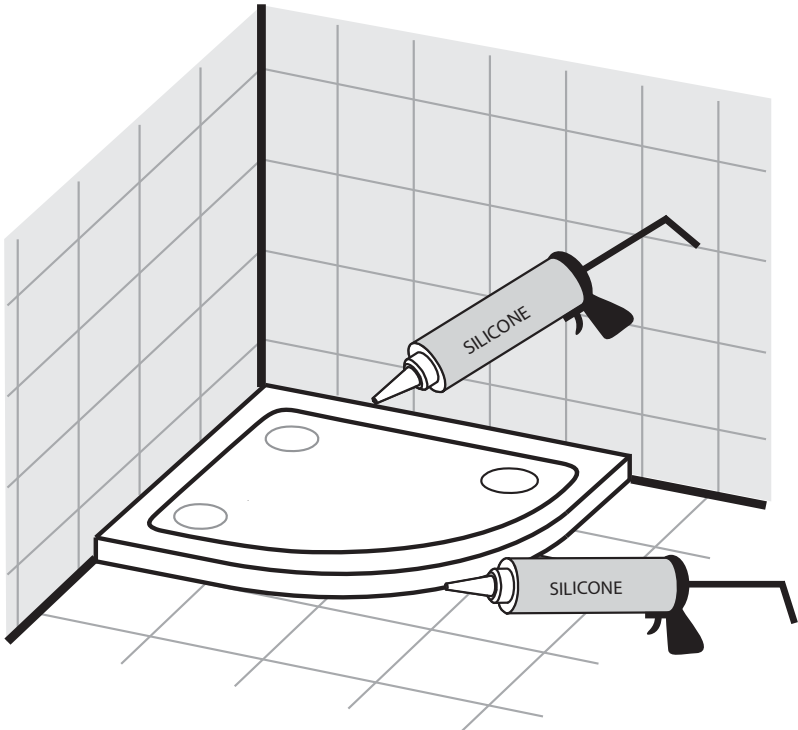


12.

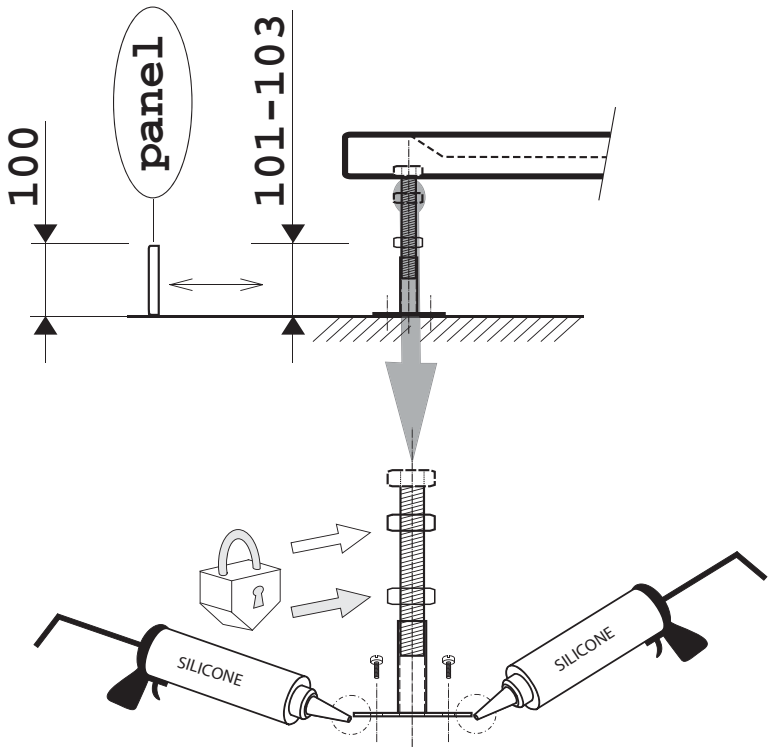

13.

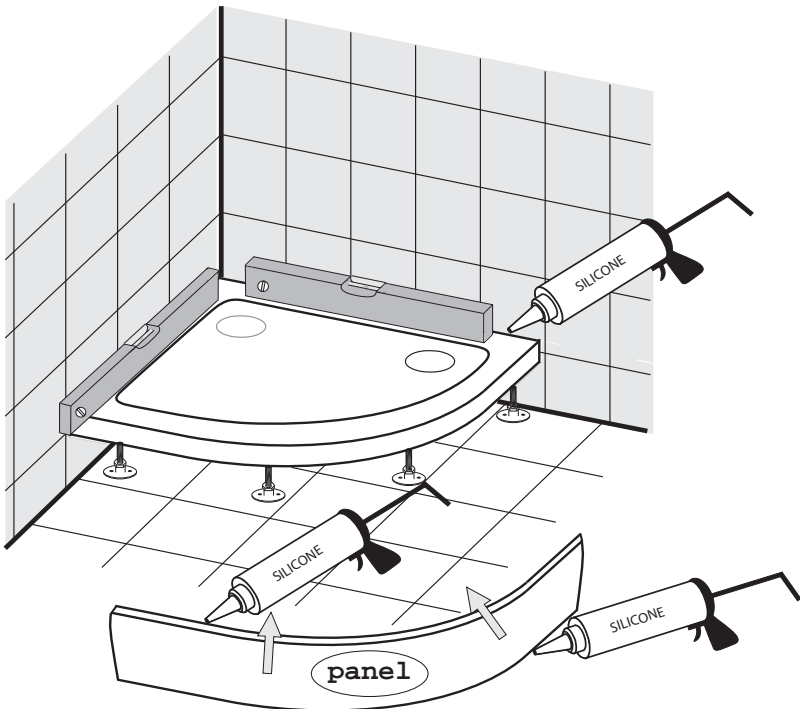


I.

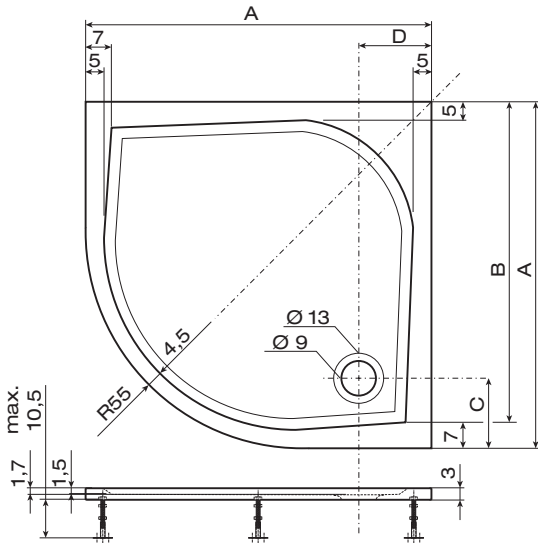


	A	B	C	D
80x80	80	73	19	19
90x90	90	83	19	19
100x100	100	93	19	19

III.

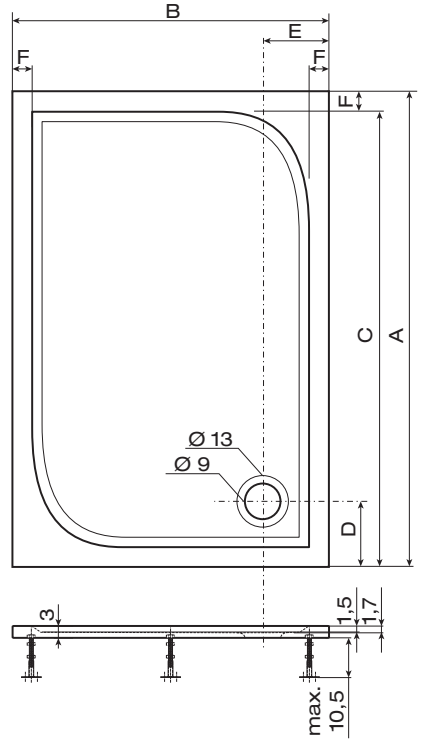

	A	B	C	D	E	F
100x80	100	80	94	19	19	6
100x90	100	90	84	19	19	6
120x80	120	80	75	19	19	5
120x90	120	90	85	19	19	5

III.

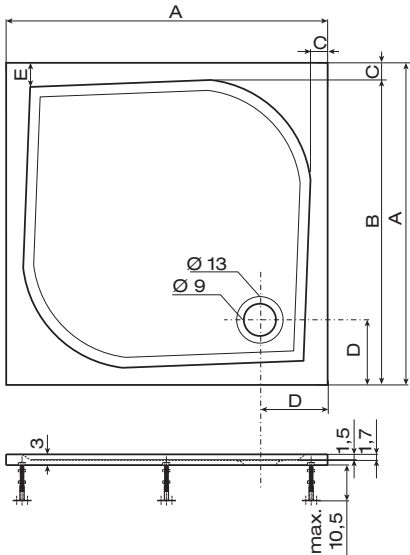

	A	B	C	D	E
80x80	80	74	6	19	7
90x90	90	85	5	18,5	7
100x100	100	95	5	19	7